 


## Installation Guide



<u>Spear</u>	<u>Capacity</u>	<u>Nut torque</u>
Conus 1 M20	1,798# @ 28" LC	332 FP
Conus 2 M28	2,922# @ 28" LC	516 FP
Conus 3 M28	4,720# @ 28" LC	516 FP

### Assembling of the SHW Bale Spears



NOTE: It is critical that all SHW bale spears are assembled as shown above and that nuts are tightened to specified torque. If the spear is not installed properly it may be prone to bending or breaking which is NOT covered under the SHW warranty. Nuts MUST be periodically re-tightened.